

# MOTIF II A.N.C.

## Touch Interface Setting



### CUSTOM ACTIONS

Left earbud

Noise control >

Right earbud

Equaliser >



## MARSHALL BLUETOOTH APP

Marshall Group AB (publ)

Download the Marshall Bluetooth app to get the most out of your headphone and keep it up to date with the latest software.



**Make sure your Marshall Bluetooth app is up to date**  
Download here

1. Connect MOTIF II A.N.C. to your mobile device.

[Settings](#)

## Bluetooth

Bluetooth




This iPhone is discoverable as "iDuckie" while Bluetooth Settings is open.

MY DEVICES

MOTIF II A.N.C.

Not Connected 

2. Goto Marshall Bluetooth App > ADD NEW DEVICE

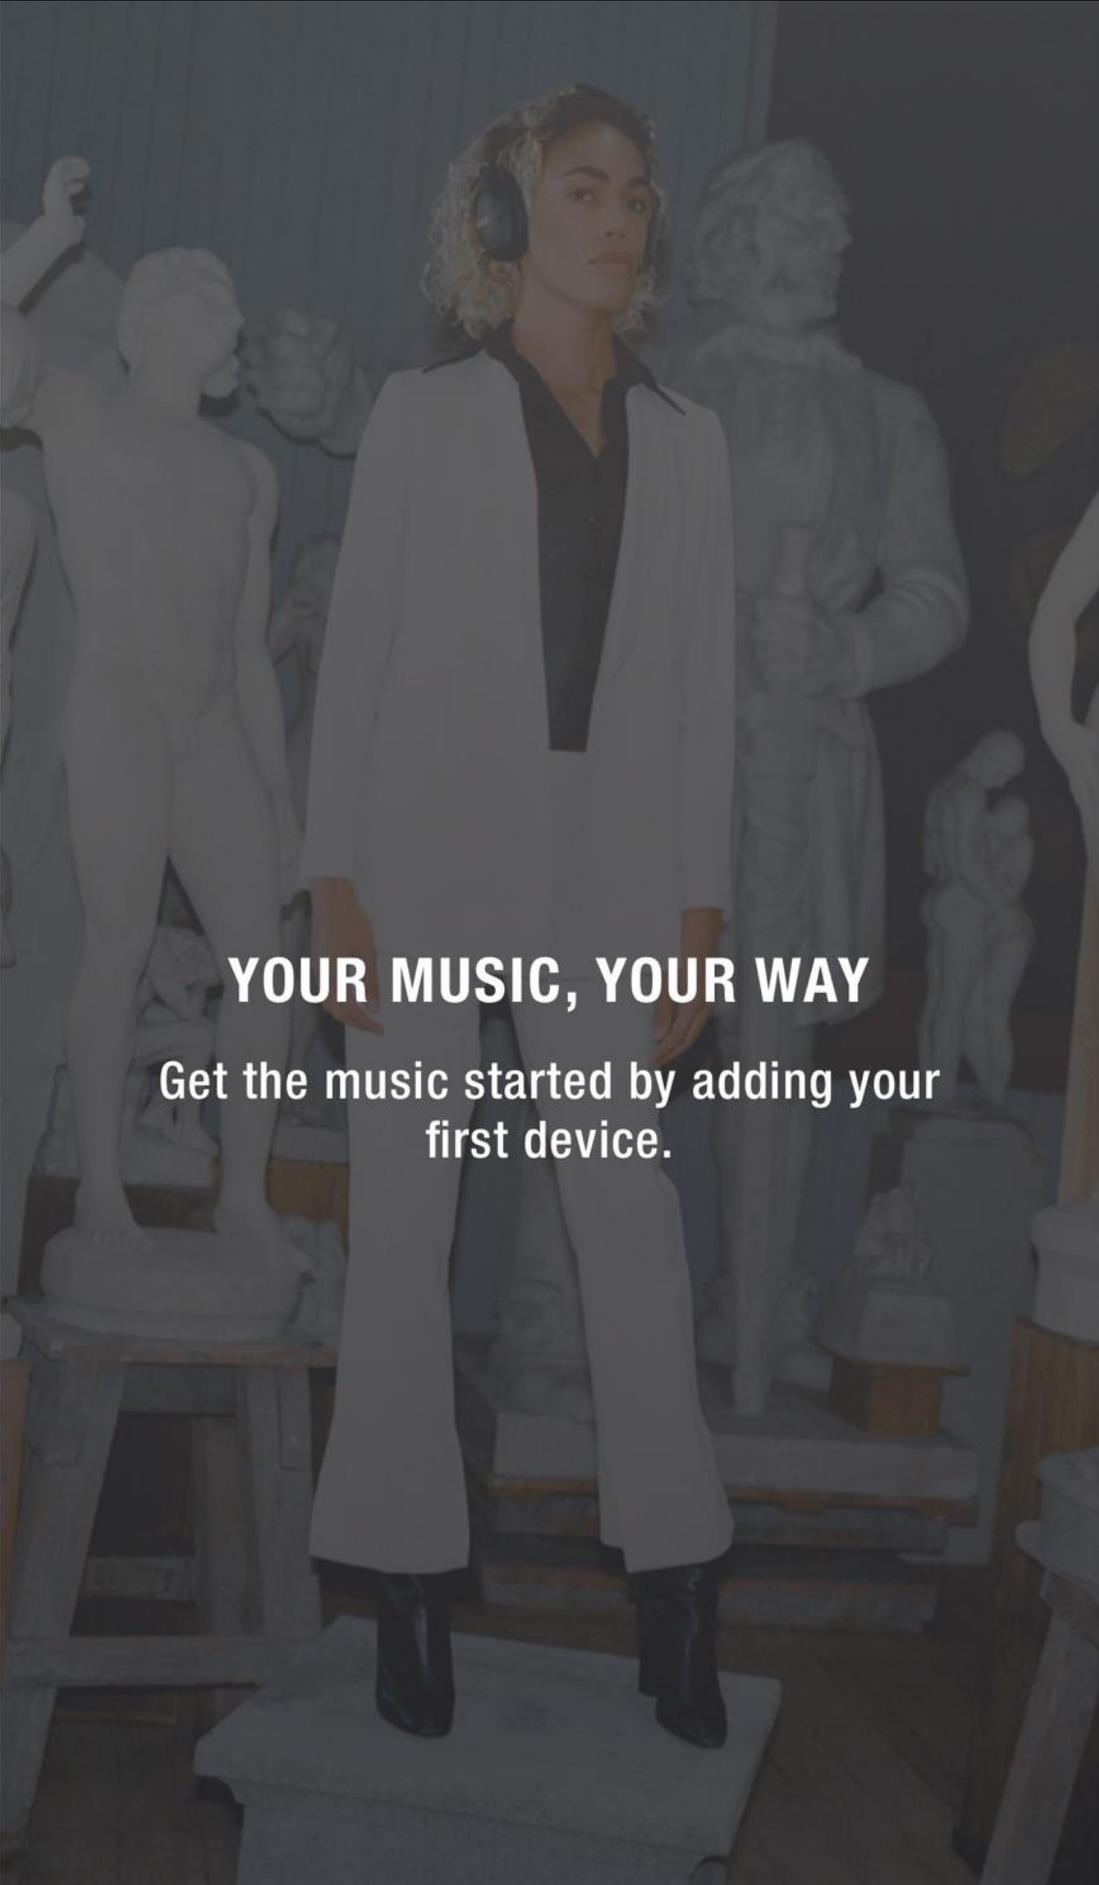

**YOUR MUSIC, YOUR WAY**

Get the music started by adding your first device.

**ADD NEW DEVICE**



Home



Explore



More

3. Select > ADD MOTIF II A.N.C.



**SEARCHING...**

Please keep your Marshall device powered on  
and nearby.



**MOTIF II A.N.C.**

**ADD**

### 3. Select > Pair



#### Bluetooth Pairing Request

"MOTIF II A.N.C. [LE]" would like to pair with your iPhone.

Cancel

Pair



3. Select > CONTINUE



**CONNECTED TO APP**

Now it's time to get listening.

**CONTINUE**

# TOUCH CONTROLS

Touch the left or right earbud to control music, manage calls, and more. Touch controls can be customized in the Marshall Bluetooth app.

- Play / Pause
- ● Skip forward or Answer/ End call
- ● ● Skip backward

▬ Long touch to toggle noise cancelling, transparency and ANC off

*\*CUSTOM ACTION needs to be set first (left or right).*

## Active Noise Cancelling (ANC)

Blocks out your surroundings and lets you focus on the music.

## Transparency

Allows you to hear your surroundings and hold conversations without removing your earbuds.

## Off

Noise control is turned off.

● ▬ Double tap and hold to play a recommendation based on your listening taste

*\*To use Spotify Tap, make sure your Spotify app is up to date.*



Connecting to the app offers access to extra features

## CUSTOM ACTIONS

1

Left earbud

Noise control >

2

Right earbud

Equaliser >

1) Left earbud

# CUSTOM ACTION

L

2) Right earbud

# EQUALISER

R


# EQUALISER

R

Right earbud

## EQUALISER

Fine-tune the EQ to get your own personal sound.

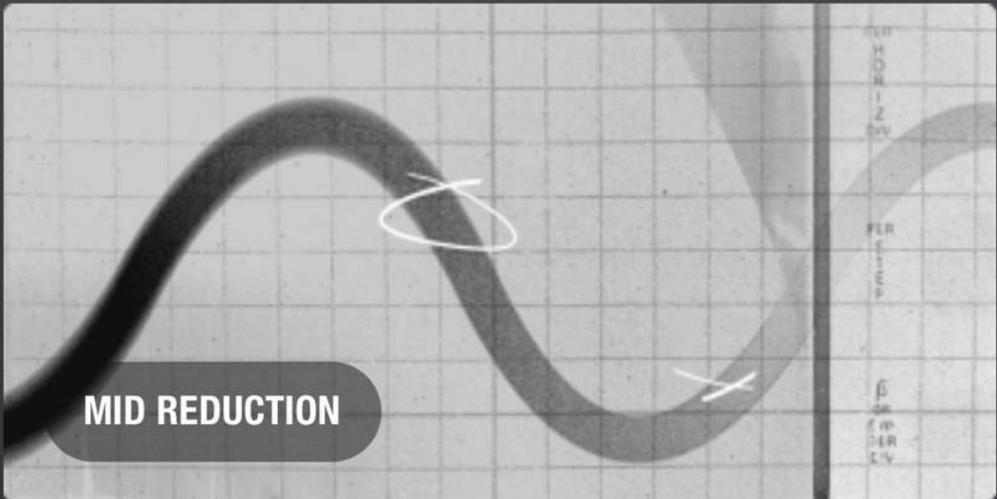

M 1


M 2

M 1

M 2

The original Marshall sound.

MARSHALL

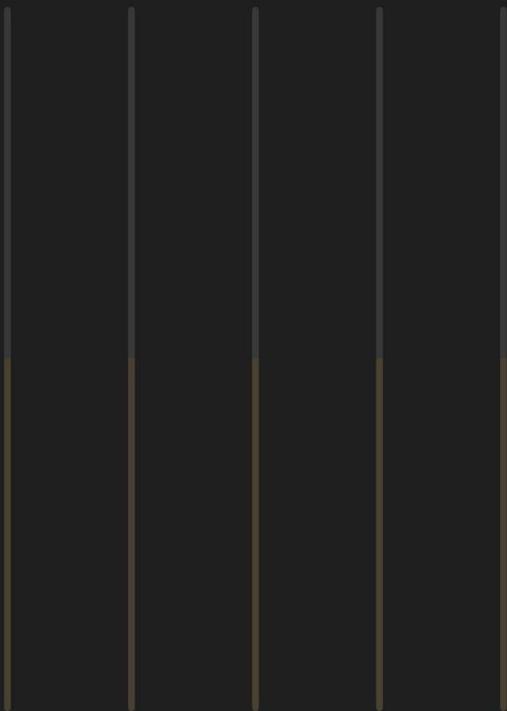

160 Hz 400 Hz 1 kHz 2.5 kHz 6.25 kHz

Select a preset or create your own.

MID REDUCTION



MARSHALL

CUSTOM

BASS BOOST

MID BOOST

TREBLE BOOST

MID REDUCTION



160 Hz 400 Hz 1 kHz 2.5 kHz 6.25 kHz

# CUSTOM ACTION

L

Left earbud

Noise control



Equaliser



Voice assistant



Volume



Do nothing



## NOISE CONTROL

ANC

Block out surroundings



Transparency

Let in surroundings



Off



Long touch the left earbud to cycle through the selected noise control modes.

# CUSTOM ACTION > Equaliser

Noise control



Equaliser



Voice assistant



Volume



Do nothing



## EQUALISER

Marshall

Setting 1


Mid reduction

Setting 2

Long touch the right earbud to cycle between the EQ settings above. You can choose settings in "Equaliser".

## EQUALISER

Fine-tune the EQ to get your own personal sound. >

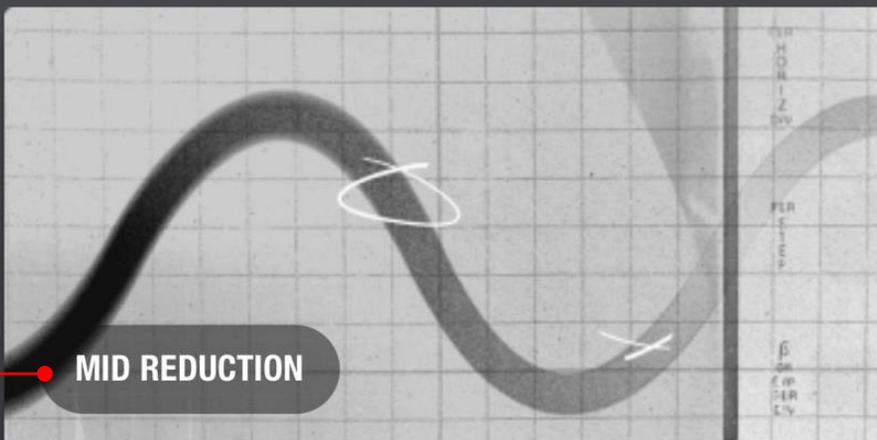

# CUSTOM ACTION > Voice assistant

Noise control



Equaliser



Voice assistant



Volume



Do nothing



## VOICE ASSISTANT

Long touch the left earbud to activate your phone's default voice assistant.

Android



Google Assistant

iOS



Siri

# CUSTOM ACTION > Volume

Noise control



Equaliser



Voice assistant



Volume



Do nothing



## VOLUME

Volume up



Volume down



Long touch the left earbud to increase the volume.

## CUSTOM ACTION > Do nothing

Noise control



Equaliser



Voice assistant



Volume



Do nothing





# FRONT ROW SOUND

WITH ACTIVE NOISE CANCELLATION

ash